

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using the InSeat® System.

DANGER!

To reduce risk of electric shock.

1. Always unplug the product from the electrical outlet immediately after using and before cleaning.
2. Do not reach for a product that has fallen into water. Unplug immediately.
3. Do not use while bathing or in a shower.

WARNING!

To reduce risk of burns, fire, electric shock, or injury to persons.

1. Your InSeat® product should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
2. Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Never operate the InSeat® product if it has a damaged cord or plug, or if it is not working properly. If it has been dropped or damaged, or dropped into water. Contact your dealer for instructions on returning it for examination and repair.
4. Close supervision is necessary when this appliance is used by, on, or near children or disabled persons.
5. Do not use outdoors.
6. Keep the cord away from heated surfaces.
7. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
8. If you are subject to any medical condition involving the use of medical device products, and/or if you are under a health professional or physician's care, please contact them before using this product.

USE ONLY
THE POWER
DEVICE
SUPPLIED
WITH THIS
PRODUCT


OPERATE
YOUR
SYSTEM
ACCORDING
TO THIS
MANUAL

MAINTENANCE INSTRUCTIONS:

No user maintenance of this product is required. If the System does not function, be sure...

- (a) The TRANSFORMER or ADAPTOR is plugged into an electric outlet.
 - (b) The TRANSFORMER or ADAPTOR cord is plugged into, and fully engaged in its receptacle.
- If there is a malfunction of any kind, contact your dealer for instructions on returning it for examination and repair.

If you need assistance for any reason, please contact us:
Write to: Customer Service InSeat Solutions, Inc. Corporate Office
11839 Smith Avenue, Santa Fe Springs, CA 90670
or call us Toll Free from anywhere in the United States at:
1-877-9-InSeat ext. 209
(1-877-946-7328)

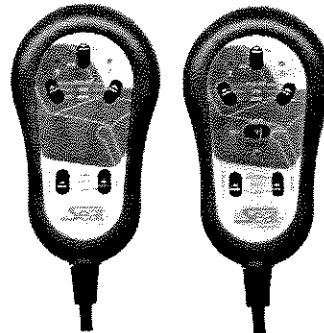

Relaxor[®] by
Message
inSeat™
Solutions

OWNER'S MANUAL and OPERATING INSTRUCTIONS

Welcome to the world of Massage!

You are now the proud owner of another great InSeat® product.

Your new InSeat® massage system brings the comforting world of massage technology and places it at your fingertips. Now you can enjoy the relaxing feel of vibrating massage and soothing heat on your tired, knotted muscles. You have the ultimate combination for your comfort.

We know you will enjoy your new InSeat® massage system product.

Limited Manufacturer's Warranty

Patents Pending

©Copyright 2001 InSeat Solutions, Inc. Santa Fe Springs, CA

ISP2/ISP2H

0903

#16402-00

OPERATING INSTRUCTIONS

POWER/ZONES

Activates Massage System

- ◆ Zone 1 switch.
- ◆ Zone 2 switch.

The location of each zone varies with individual chair styles.

- ◆ Slide switch to ON for steady massage.
- ◆ Slide switch to PULSE for repetitive pulsing action.


HEAT (OPTIONAL)

- ◆ Select LOW or HIGH heat for comforting warmth in the lumbar area.

INTENSITY

Controls INTENSITY during all programs.

Select HIGH, MED, or LOW.

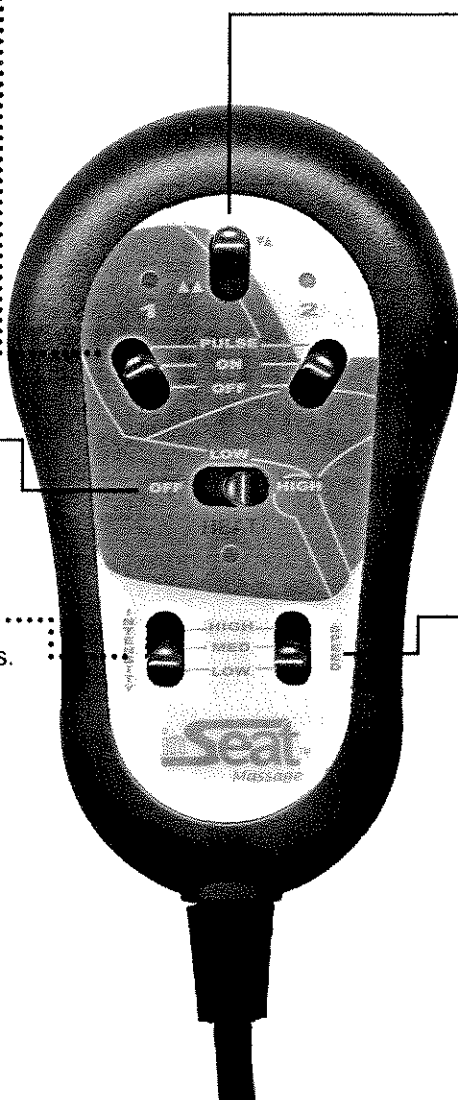

PULSE CONTROL

Set both Zone switches to PULSE.

▼▲ Alternating Zone pulses.

▲▲ Simultaneous Zone pulses.

TIMER

Massage and heat systems will stop automatically after approximately one half hour of operation.

- ◆ To re-activate, slide either the HEAT or a ZONE switch from OFF to an active position.

SPEED

Controls pulsing rate of massage motors in PULSE.

Select HIGH, MED, or LOW.

SAVE THESE INSTRUCTIONS!