

**USE ONLY  
THE POWER  
DEVICE  
SUPPLIED  
WITH THIS  
PRODUCT**

**OPERATE  
YOUR  
SYSTEM  
ACCORDING  
TO THIS  
MANUAL**

**WARNING!**

**To reduce risk of burns, fire, electric shock, or injury to persons.**

1. Your InSeat™ product should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
2. Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Never operate the InSeat™ product if it has a damaged cord or plug, or if it is not working properly. If it has been dropped or damaged, or dropped into water. Contact your dealer for instructions on returning it for examination and repair.
4. Close supervision is necessary when this appliance is used by, on, or near children or disabled persons.
5. Do not use outdoors.
6. Keep the cord away from heated surfaces.
7. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
8. If you are subject to any medical condition involving the use of medical device products, and/or if you are under a health professional or physician's care, please contact them before using this product.


**DANGER!**

**To reduce risk of electric shock.**

1. Always unplug the product from the electrical outlet immediately after using and before cleaning.
2. Do not reach for a product that has fallen into water. Unplug immediately.
3. Do not use while bathing or in a shower.

*Read all instructions before using the InSeat™ System or the Relaxor® products.*

**IMPORTANT SAFETY INSTRUCTIONS**

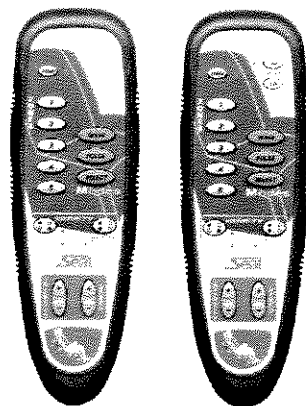

**OWNER'S MANUAL and OPERATING INSTRUCTIONS**

Welcome to the world of Massage!

You are now the proud owner of another great InSeat™ product.

Your new InSeat™ massage system brings the comforting world of massage technology and places it at your fingertips. Now you can enjoy the relaxing feel of vibrating massage and soothing heat on your tired, knotted muscles by choosing from the dozens of self-programmed settings.

We know you will enjoy your new InSeat™ massage system product.

**1-877-9-InSeat ext. 209**  
**(1-877-946-7328)**

If you need assistance for any reason, please contact us:  
11839 Smith Avenue, Santa Fe Springs, CA 90670  
or call us Toll Free from anywhere in the United States at:

No user maintenance of this product is required. If the System does not function, be sure...  
(a) The TRANSFORMER or ADAPTOR is plugged into an electric outlet.  
(b) The TRANSFORMER or ADAPTOR cord is plugged into, and fully engaged in its receptacle.  
If there is a malfunction of any kind, contact your dealer for instructions on returning it for examination and repair.

**MAINTENANCE INSTRUCTIONS:**

Limited Manufacturer's Warranty  
Patents Pending

©Copyright 2001 InSeat Solutions, Inc. Santa Fe Springs, CA

# OPERATING INSTRUCTIONS

## POWER

Activates Massage System

- ◆ Turn On: Press PWR.
- ◆ Turn Off: Press PWR again.

### 15 and 30 minute Timers:

Green light = 15 minute Timer.

Hold down PWR:

Amber light = 30 minute Timer.

- ◆ Unit may also be turned on by pressing any ZONE 1-5 key.  
To restart after Timer shuts off:
- ◆ Press PWR or any ZONE 1-5 key.

## ZONES

- 1 - Upper Back
- 2 - Lower Back
- 3 - Hip Region
- 4 - Thigh Region
- 5 - Calf Region


## INTENSITY

Controls INTENSITY during all modes.  
(+) to increase Intensity and (-) to decrease.

## SPEED

Controls pulsing frequency of massage motors in PULSE mode and controls the velocity as it cycles through in WAVE mode.

Press (+) to increase and (-) to decrease.

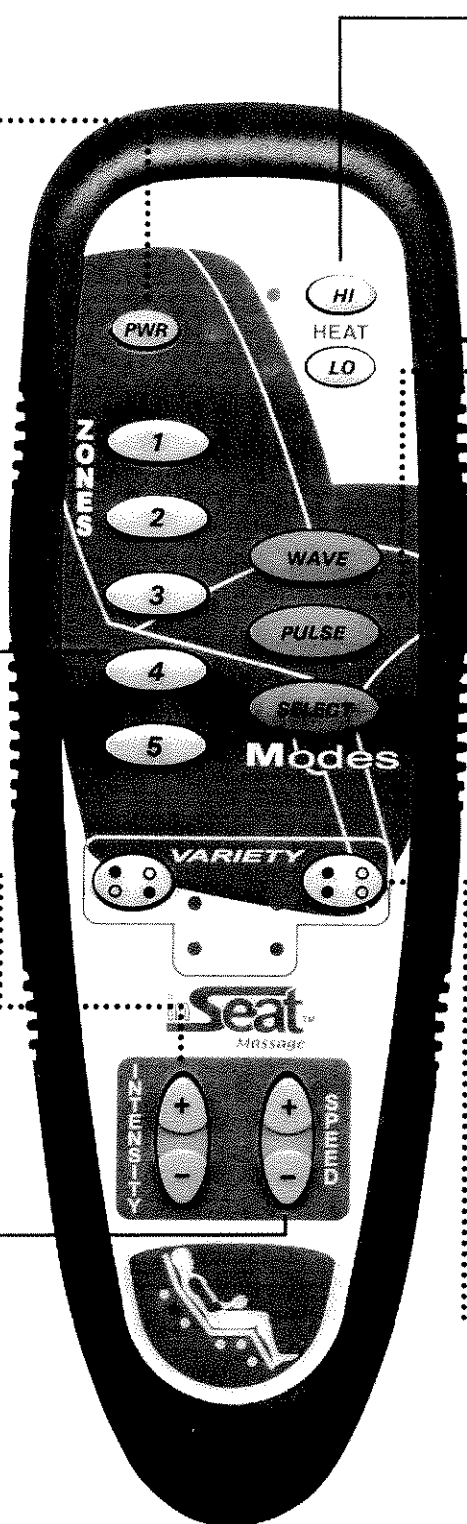

## HEAT (OPTIONAL)

Activates Heat option.

- ◆ Press LO for low heat. (Amber Light)
- ◆ Press HI for high heat. (Red Light)
- ◆ Press again to turn off.

Works with massage or independently.

30 minute Timer

To continue after Timer shuts off, press HEAT button again.

## MODES

### WAVE -

Massage motors move up and down in a wave-like action.

- ◆ Press WAVE.
- ◆ Press any or all Zones (1-5) to activate.
- ◆ Press any or all Zones (1-5) to cancel.

### PULSE -

Massage motors turn On and Off to simulate a pulsing action.

- ◆ Press PULSE.
- ◆ Press any or all Zones (1-5) to activate.
- ◆ Press any or all Zones (1-5) to cancel.

### SELECT -

Lets you choose any or all zones for massage.

- ◆ Press SELECT.
- ◆ Press any or all Zones (1-5) to activate.
- ◆ Press any or all Zones (1-5) to cancel.

## VARIETY

2 pre-programmed Special Effects using the transducers in ZONES 1 & 2. Massage action alternates between motors (shown light and dark) on each key.

**SAVE THESE INSTRUCTIONS!**